

LESLIE 7276
CONSOLE CONNECTOR KIT
FOR GULBRANSEN CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The leslie 7276 Console Connector Kit connects Gulbransen consoles to a single leslie speaker. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1 Console Connector	012617	1 Tremolo Control
1 Console Adapter	027060	012625 brown
1 6 Conductor Cable	017277	012633 ebony
1 Instructions	036467	012641 ivory
5 Insulated Staples	028464	
1 Oil er	053025	1 Echo Control
2 Screw, 8 X 1/2	029132	029397 brown
4 Screw, 6 x 1/2	029124	029405 ebony
		029413 ivory

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Remove the 12-pin output plug from the console amplifier and plug it into the adapter socket. (See "A" on Fig. 1).
6. Insert the adapter plug into the output socket on the console amplifier. (See "B" on Fig. 1).
7. Plug the adapter power cord into a SWITCHED 117 VAC socket on tne console amplifier. (See "C" on Fig. 1).

8. Fit the 5-pin adapter socket onto the plug marked "CONSOLE" on the connector chassis.
9. Plug the leslie speaker cable into the socket marked "LESLIE" on the connector chassis.
10. Follow the load resistor setting instructions for the "8 OHM" position as outlined in the leslie service manual.
11. Adjust the volume as outlined in the leslie service manual. The installation is now complete.

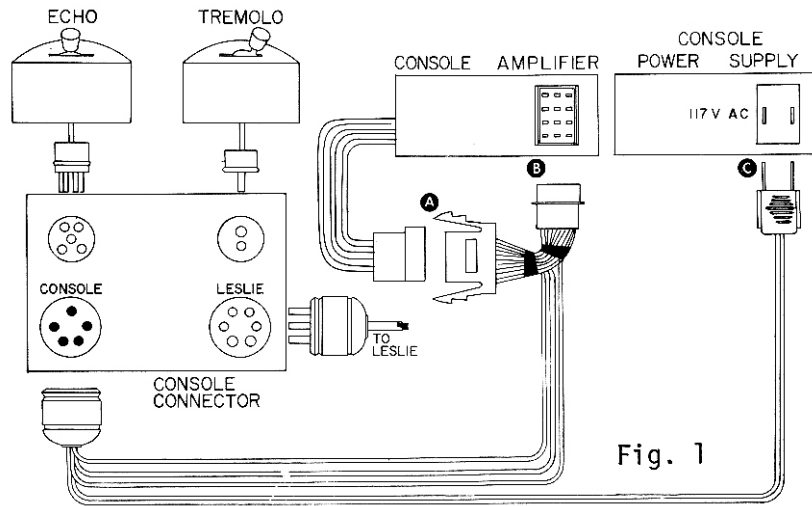


Fig. 1

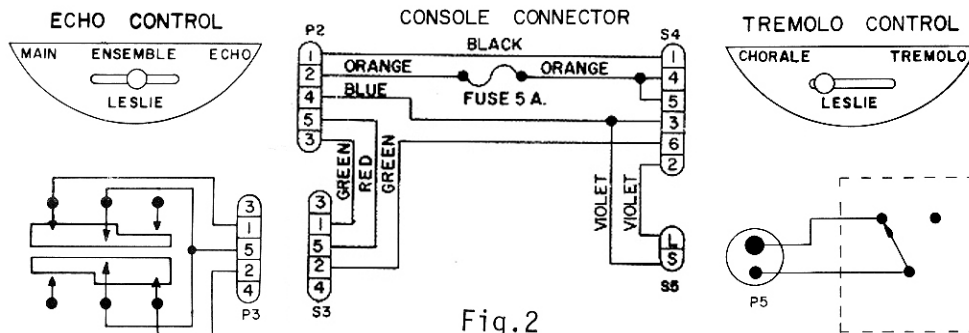


Fig. 2

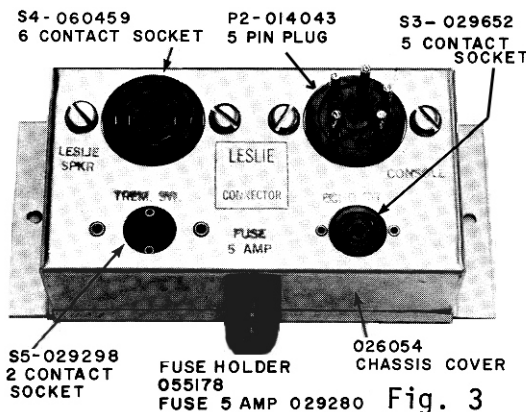


Fig. 3

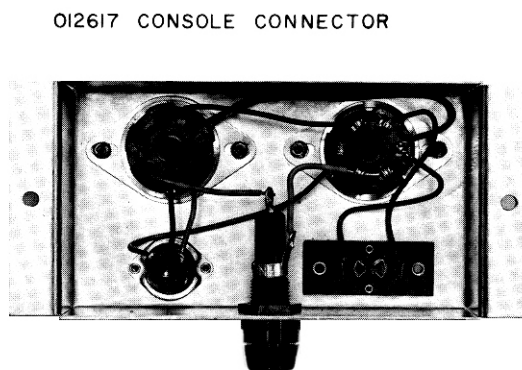


Fig. 4

027060 Console Adapter

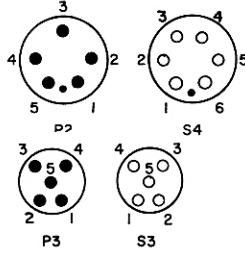
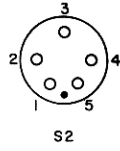
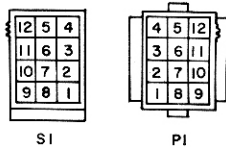
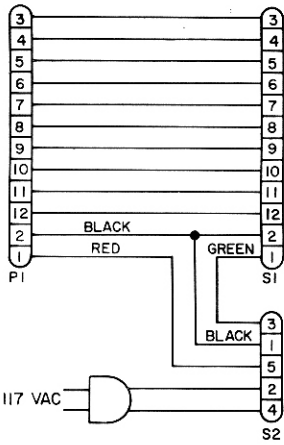


Fig. 5

Fig. 6

PARTS LIST

ECHO CONTROL

Echo Switch Case

brown	029199	brown
ebony	029207	ebony
ivory	029215	ivory

Switch Case Cover

brown	048702	brown
ebony	048710	ebony
ivory	048728	ivory

Switch Knob

brown	048066	brown
ebony	048074	ebony

Switch Retainer (2)	048116
Switch Only	010249
5-Pin Plug	021238

TREMOLO CONTROL

Tremolo Switch Case

012260
012278
012286

Switch Case Cover

048702
048710
048728

Switch Knob

048066
048074

Switch Retainer (2)	048108
Switch Only	042911
2-Pin Plug	029165