

LESLIE BRAKE ACCESSORY

Brown 034256

Ebony 038547

Ivory 038554

For LESLIE 122, 142, 222 Series Speakers

The LESLIE Brake Accessory is designed for use with two-speed LESLIE speakers and enables the organist to run the rotors at the fast (tremolo) speed, the slow (chorale) speed or bring the rotors to a complete stop.

CONTENTS OF KIT:

1	6C5T Thermal Relay	033845	1	Brake Interceptor
1	Adapter Cable	029843		brown 035444
1	Instructions	038398		ebony 038281
2	Brackets	033803		ivory 038323
1	Cork Insulation	033811		
2	Screws, 6 x 1/2", Blk. Oxide	029124		
6	Insulated Staples	028464		

TO INSTALL THE KIT:

1. Remove the original LESLIE tremolo control switch from the front of the organ, and disconnect the control cable from the tremolo terminal box inside the organ by removing the two wire nuts.
2. Mount the brake control switch to the front of the organ in the same location as the original control.
3. Pass the control cable inside the console and connect the twoconductor cable to the terminal box using the two wire nuts previously removed.
4. Route the long cable to the LESLIE speaker.
5. Mount the small angle brackets on the brake interceptor. (See "E" on Fig. 1.)
6. Apply the cork insulation to the backside of the brake interceptor. (See "C" on Fig. 1.)
7. Remove and discard the jumper plug from the "BRAKE" socket on the LESLIE amplifier. Plug the brake adapter cable into this socket.
8. Fit the other end of the adapter cable onto the 5-pin plug of the brake interceptor.
NOTE: Instructions 5-9 are for Lo-boy type cabinets. For standard cabinets, omit instructions 5-9 and plug the brake interceptor directly into the "BRAKE" socket on the LESLIE amplifier.

9. Insert the Thermal Relay into the 9-pin socket on the brake interceptor.
 Installation is now complete.

PARTS LIST:

BRAKE INTERCEPTOR

Chassis	011783	Switch Case	
Cover	012195	Brown	013417
P1	033738	Ebony	013433
S1	033746	Ivory	013425
Cable, 35'	068518	Switch Case Cover	
Cable, 7'	062232	Brown	048702
		Ebony	048710
		Ivory	048728
		Switch Knob	
		Brown	048066
		Ebony	048074
		Switch Retainer (2)	048116
		Switch Only	015412

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a LESLIE speaker dealer. Orders should include part numbers listed.

